

Yottacontrol A-1012 Analog IO module Quick Start


The Yottacontrol A-1012 Analog IO module had 2 protocol to setup the parameter.


1. Over the USB port.
2. Over the RS-485 port.




Before the regular use, must finish the related setup process. And prepare below items to finish the setup.

1. Download and install the USB driver from below web link.
http://www.yottacontrol.com/download/A5X_USB_DRIVER.rar
2. Download and install the YottaUtility software from below web link.
http://www.yottacontrol.com/download/YOTTA_UTY.rar
3. Power on the A-1012 and turn the back switch to Init mode. Over the USB or RS-485 to link A-1012 and PC.
4. Open the YottaUtility software.

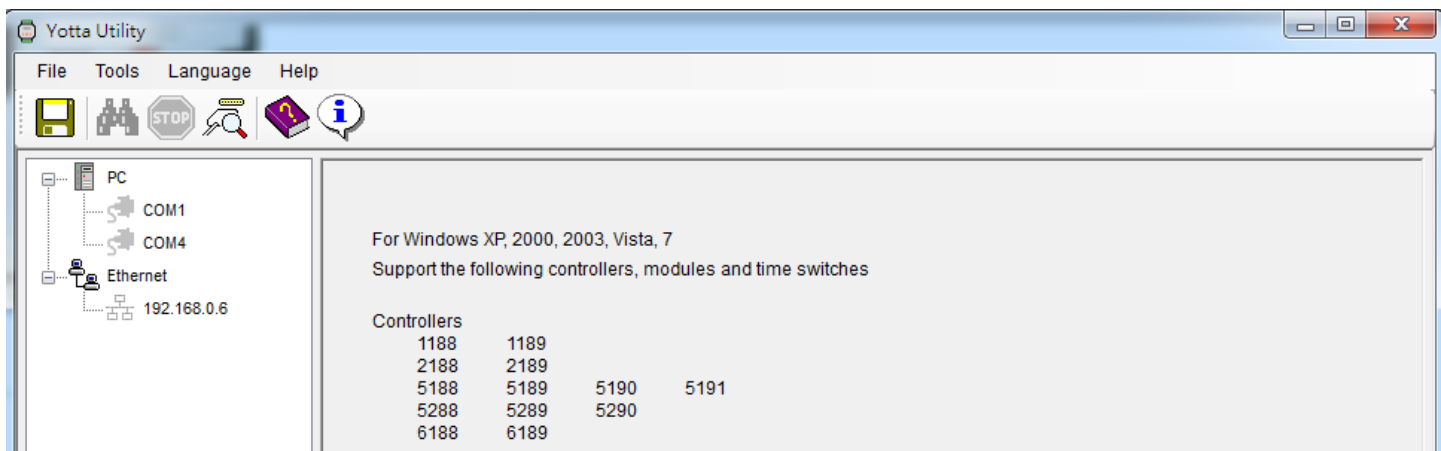


5. Click the  to refresh the COM port.

6. Click the related COM port.

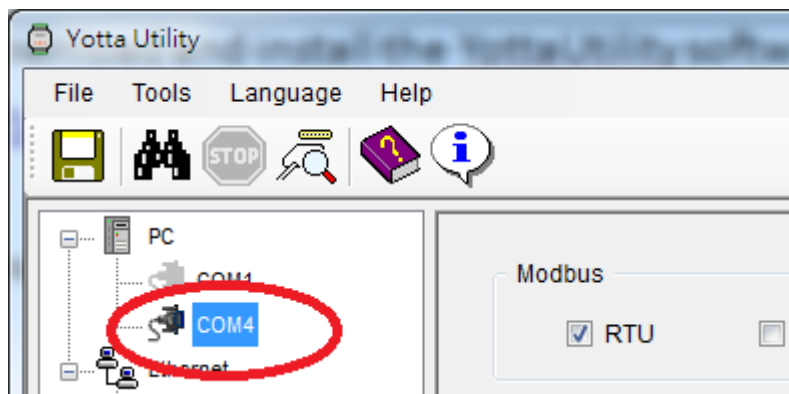

7. Click the  to search module.

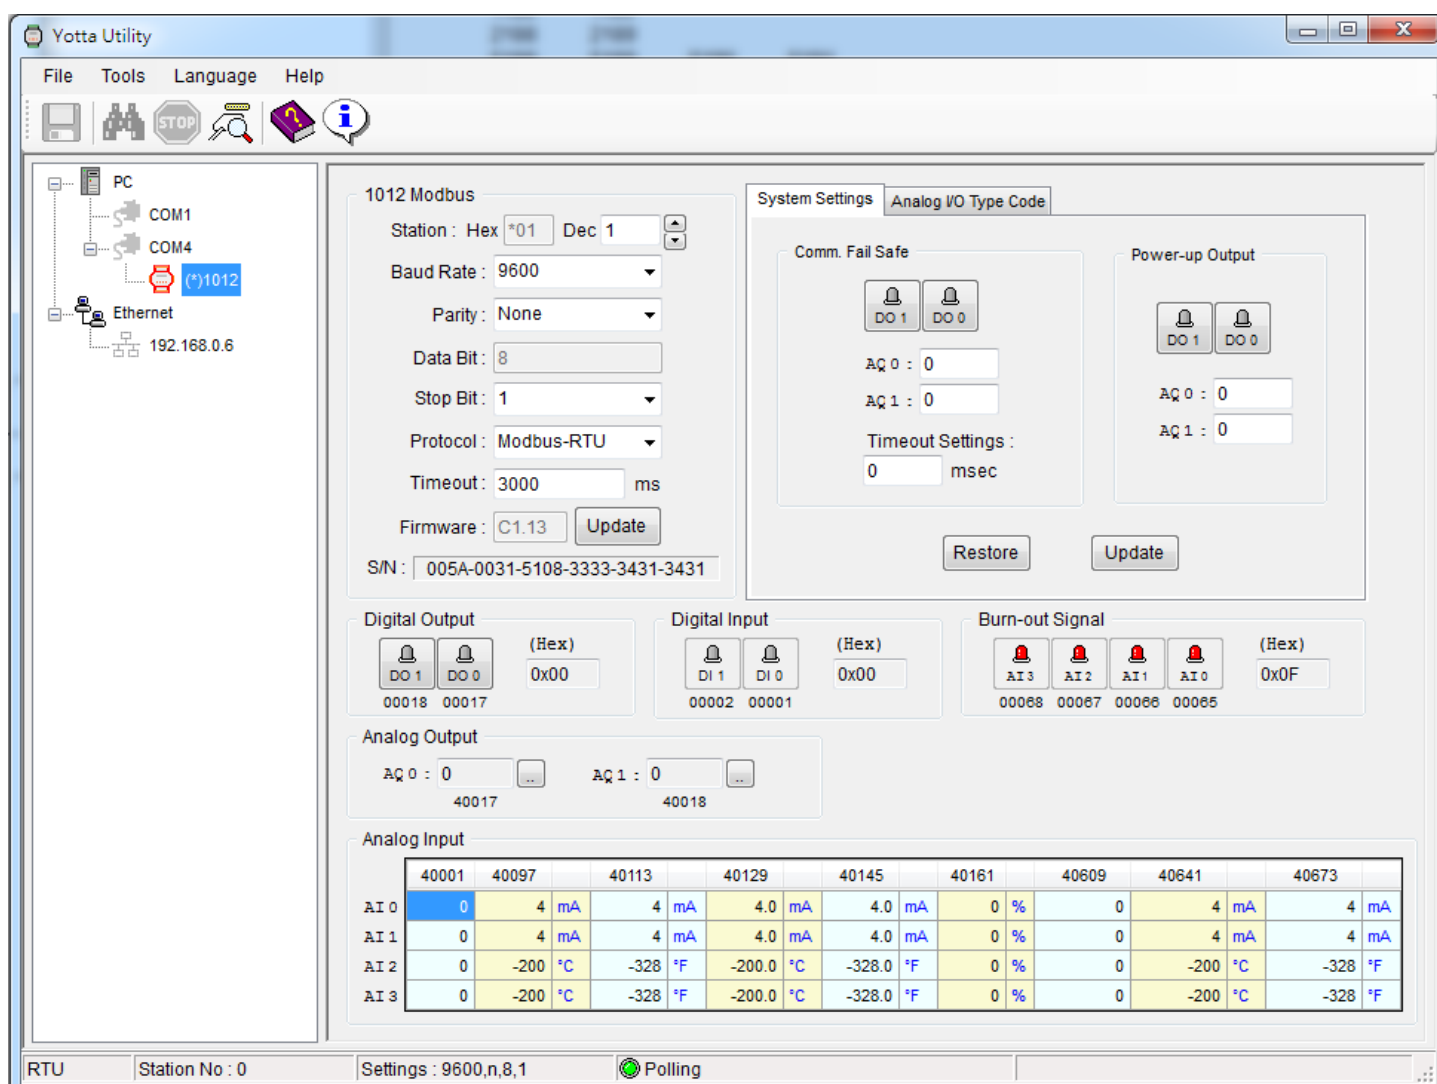

8. Can setup the related parameter from above photo. When finish the setup, must click the **Update** button. And turn the A-1012 module's switch to **Normal** mode.

9. Done.